


3rd Floor Plan

= window
 = step
 = door

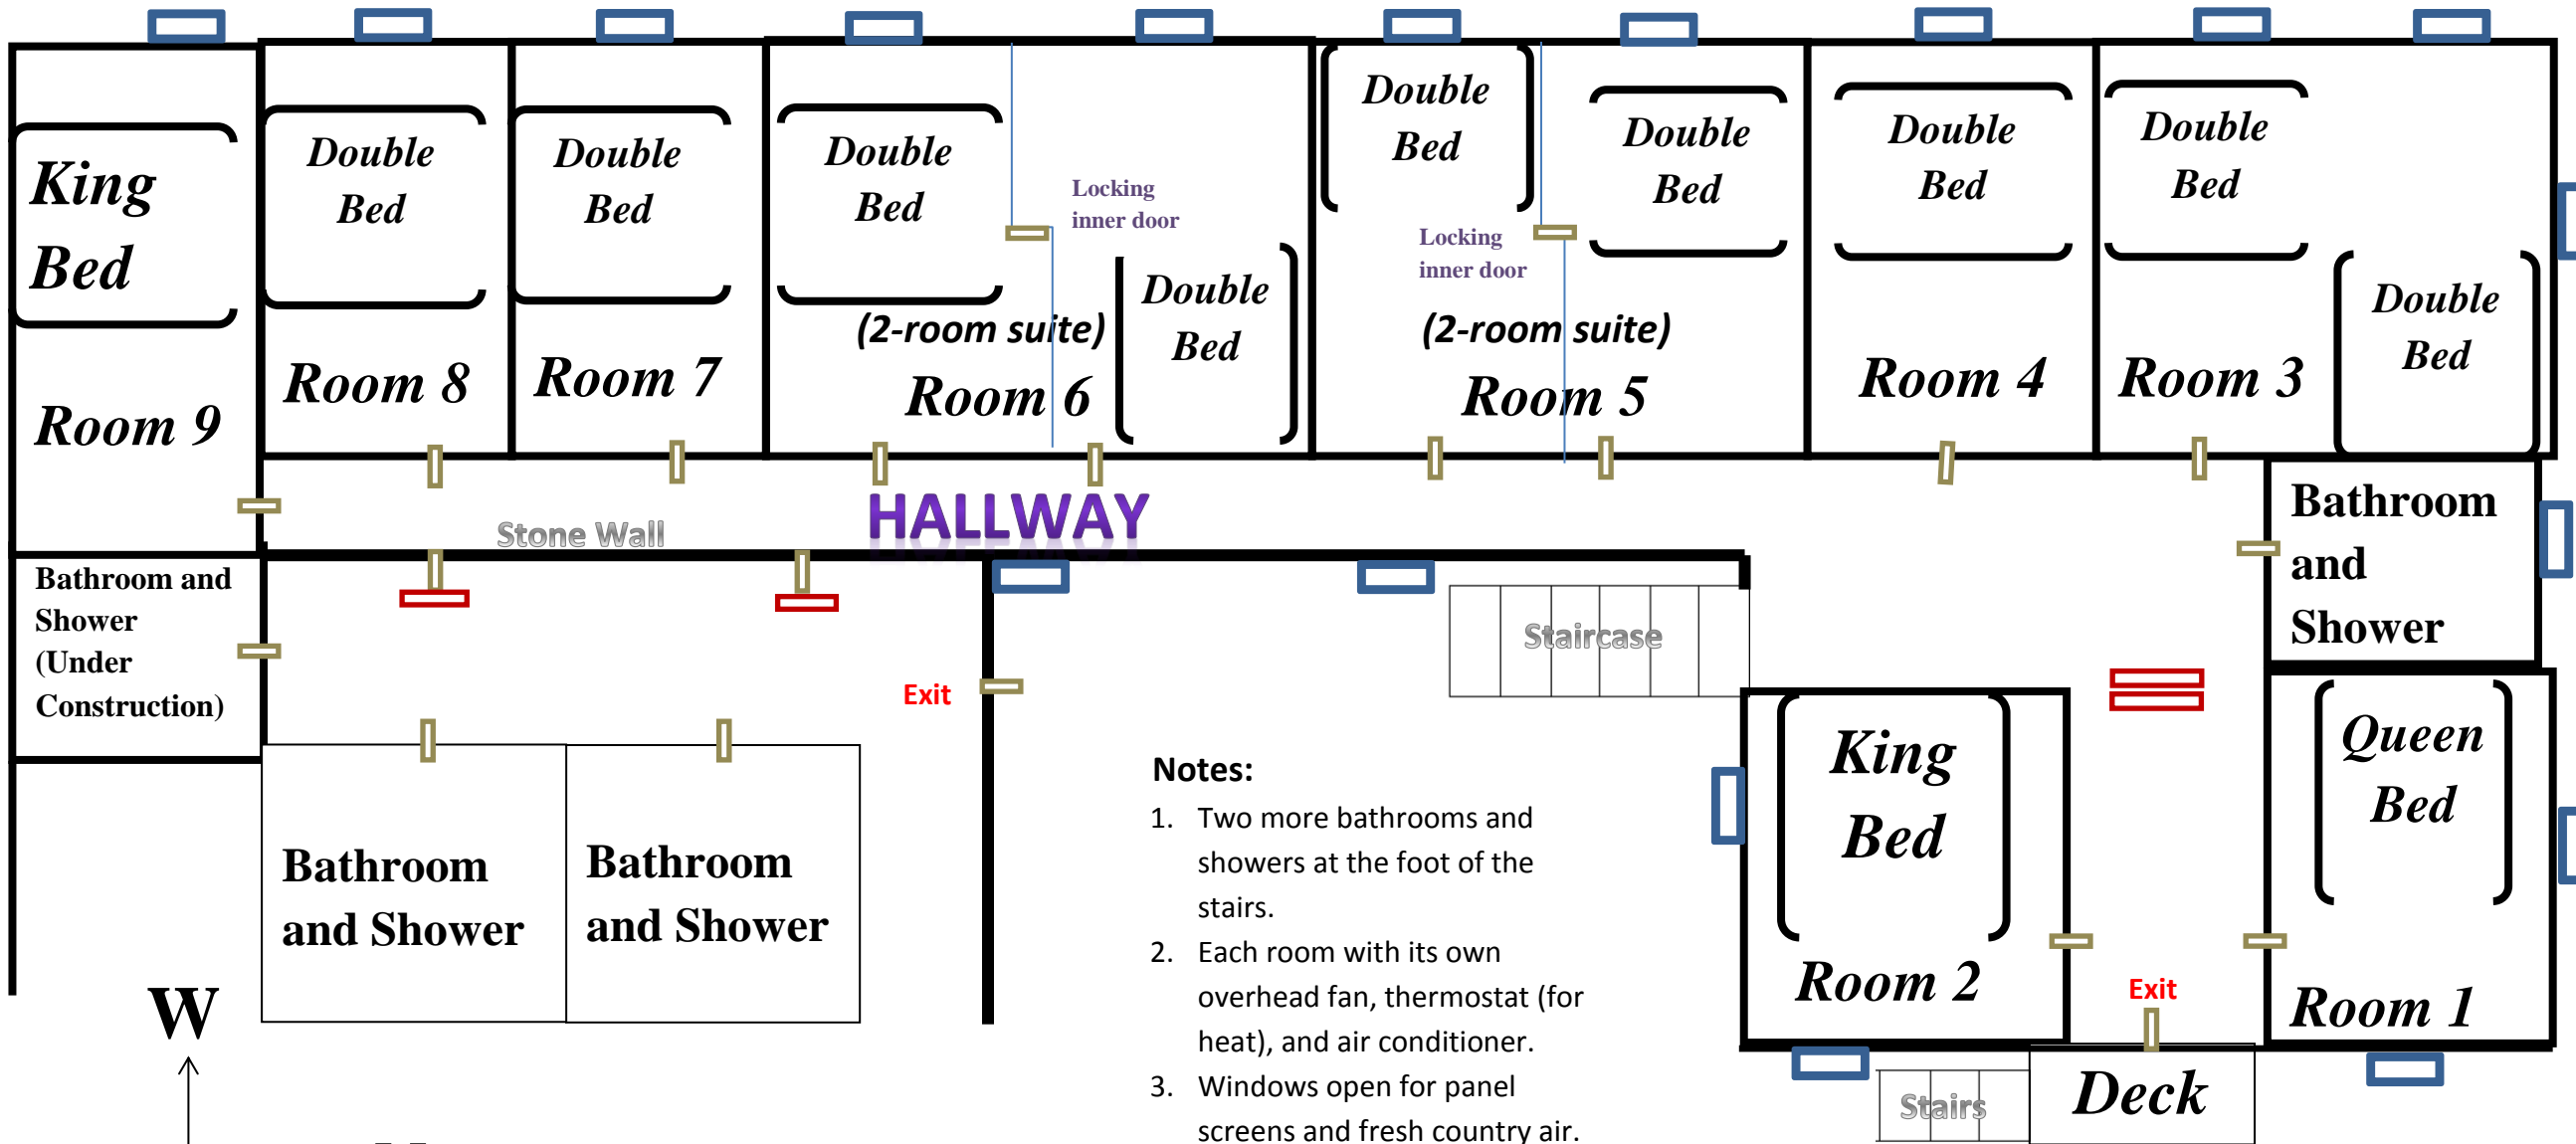

Notes:

1. Two more bathrooms and showers at the foot of the stairs.
2. Each room with its own overhead fan, thermostat (for heat), and air conditioner.
3. Windows open for panel screens and fresh country air.